

Furniture Care

Timber Benchtop

- _ Do not place hot objects such as pots from the stove directly onto the benchtop. Use a 'benchtop saver' or a chopping board to prevent hot items marking the benchtop.
- _ Do not chop directly on the benchtop. Knives can damage the surface.
- _ Do not allow water to remain on the benchtop for extended periods. Wipe up droplets or pools of water immediately, especially after using the sink.
- _ Re-apply an oil finish such as Livos Kunos or Volvox Hard Oil Wax every 18 months. There is no need for sanding prior to applying the finish.

Stainless Steel Benchtop

- _ Stainless steel can scratch easily. Take care with sharp objects.
- _ Clean the surface with a soft cloth, and do not use abrasive detergents.
- _ Do not chop directly on the benchtop. Knives can scratch the surface.

Stone Benchtop

- _ Stone and reconstituted stone containing resin are porous and prone to staining. Wipe up any spillage immediately, and make sure the underside of items kept on the benchtop is clean.
- _ Do not chop directly on the benchtop. Knives can scratch the surface.

Plywood Cabinetry

- _ Do not place hot objects directly onto the furniture.
- _ Sharp objects can scratch the surface.
- _ Minimise contact with water. Wipe up droplets or pools of water immediately, especially after using the sink.